

# UNI servis HAMIL - MILAN HABÁNEK

predaj a servis elektrického náradia a záhradnej techniky:  
NAREX • FESTOOL • METABO • MAKITA • MILWAUKEE • BOSCH • FLEX • FEIN  
DEWALT • BLACK&DECKER • AEG • REBIR • IRWIN • LENOX • BECO • SOLGA









[www.uniservis.sk](http://www.uniservis.sk)












Legionárska 30 • 911 01 Trenčín  
tel.: +421 32 6522 688 • mobil: +421 905 329 762 • mobil: +421 918 486 038  
e-mail: [hamil@uniservis.sk](mailto:hamil@uniservis.sk)



## CENOVÁ ponuka uhlíkov pre alternátory , štartéry, motorky 2026



P.č.	Obj.kód	Rozmer	Nr. kat.	Označenie zostavy	Cena	Zaradenie	FOTO
<b>Uhlíky štartéry-alternátory BOSCH</b>							
1.	<b>S 01.2</b>	7x10x18	2 007 014 026 (12V)	<b>BSX 75</b>	<b>4,79</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 208 039-41, 44, 49, 51-54, 100, 0 001 211 200,1,4,6,9,8 9-91, 97,	
2.	<b>S 01.5</b>	9x16x25,5	2007 014 053 (12 V)	<b>BSX 102</b>	<b>6,98</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 357 002, 0 001 362 001-9, 11-17, 9 000 143 400, 2, 4-7,9	
3.	<b>S 01.6</b>	7x16x18	2007 014 054 (12 V)	<b>BSX 104</b>	<b>6,62</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 208 009, 13, 24- 26 0 001 211 001, 2, 4, 16, 0 001 311 001, 7, 14, 16,	
4.	<b>S 01.12</b>	9x16x17	2007 014 068 (12 V)	<b>BSX 137- 143</b>	<b>8,50</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 362 034-36, 38, 39 0 001 366 001-6, 8-22, 9 000 143 203, 4,	
5.	<b>S 01.13</b>	9x16x18,2	2 007 014 069 (24 V)	<b>BSX 138- 142</b>	<b>9,94</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 363 003-5, 7, 9, 13 0 001 363 103-123	
6.	<b>S 01.15</b>	7x16x15	1007 014 138 (12 V)	<b>BSX 140</b>	<b>7,38</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 208 516, 710, 0 001 312 108, 109 0 001 317 007-10, 12, 13	
7.	<b>S 01.28</b>	5x8x19,5	1 127 014 017 (24 V)	<b>BX 202</b>	<b>2,22</b> <b>Sada</b>	<b>Do alternátora:</b> 0 120 400 519, 948, 50, 52-54, 0 120 450 010, 12, 14- 17,	
8.	<b>S 01.32</b>	9x20x28	2 007 014 021 1 007 014 107 (24 V)	<b>BSX 34</b>	<b>20,88</b> <b>Sada</b>	<b>Do štartéra:</b> 0 001 402 001,7,9,11,12 ,18,23,34,41,43,4 0 001 052-61,65,66,68,	















9.	<b>S 01.73</b>	6,4x27,8x18	6033AD3 260 6033AD3 261	<b>BSX 224- 225</b>	<b>24,12</b> <b>Sada</b>	<b>Do štartéra:</b> 0001230001-24, 26-30 Zariadenie: John Deere, Renault, KHD, SAME	
<b>UHLÍKY DO ALTERNÁTORÓV / ŠTARTÉROV FIAT</b>							
10.	<b>S 02.1</b>	6x16x17	805581 (12 V)	<b>JSX 5</b>	<b>4,05</b> <b>Sada</b>	<b>Do štartéra:</b> 843034,870347,405812, Fiat 126p	
11.	<b>S 02.2</b>	7x16x20	4045771 (12 V)	<b>JSX 13</b>	<b>15,62</b>	<b>Do štartéra:</b> 4044309,40636136, FSO, Polonez	
12.	<b>S 02.3</b>	6x15x16,7	832 204 61 832 201 31	<b>JSX 33- 34</b>	<b>6,12</b> <b>Sada</b>	<b>Do štartéra:</b> 631 234 30-33,35,36 631 235 30-35 631 934 35	
13.	<b>S 03.1</b>	4x7x20	54202906	<b>LAX 82</b>	<b>2,09</b> <b>Sada</b>	<b>Do alternátora:</b> A 127	
<b>Magneti Marelli</b>							
14.	<b>S 05.5</b>	4,6x6,3x15,4	300722B, V	<b>PX 60</b>	<b>2,12</b> <b>Sada</b>	<b>Do alternátora:</b> A12R35T, 57,58,351T A13N51,69,76 A14R34T,54T, 341T,	
15.	<b>S 05.7</b>	4,7/9x11x14	594064 610204	<b>PSX142- 147</b>	<b>7,78</b> <b>Sada</b>	Do štartéra D5RAS,-10	
16.	<b>S 05.8</b>	7x14x13,7	187778 187779	<b>PSX 142- 143</b>	<b>6,41</b> <b>Sada</b>	<b>Do štartéra:</b> D7R5,11,15	
17.	<b>S 05.9</b>	7x18x16	72 591 A	<b>PSX 64- 70</b>	<b>6,08</b> <b>Sada</b>	<b>Do štartéraa:</b>	
18.	<b>S 05.16</b>	9/4,5x11x18		<b>PSX 148- 149</b>	<b>8,53</b> <b>Sada</b>	<b>Do štartéra:</b> Peugeot 205	
19.	<b>S 05.21</b>	4,6x6,4x15	300821B (12 V)	<b>SVX 7</b>	<b>1,30</b> <b>Sada</b>	<b>Do alténatora</b> A12R22,24,25,33 ,34,36, A13N6,10,12- 15,17-20, A14N1,2,9- 14,16,18,22,	














20.	<b>S 07.2</b>	8x15x15	75238	<b>USX 73-85</b>	<b>13,90</b> Sada	Do štartéra: R5, R12, R14	
<b>UHLIKY DO ALTERNATOROV/ ŠTARTÉROV DENSO HITACHI MITSUBISCHI</b>							
21.	<b>S 09.3</b>	5x8x23	A648D02 770	<b>JAAX 36</b>	<b>2,48</b> Sada	<b>Do alternátora:</b> md611689 Mitsubishi: Pajero Dodge: Stealth	
22.	<b>S 09.4</b>	5x8x18	L170- 1325	<b>JAAX 39</b>	<b>2,38</b> Sada	<b>Do alternátora:</b>	
23.	<b>S 09.6</b>	5x7x21	L150- 23251 (12 V)	<b>JAAX 32</b>	<b>1,80</b> Sada	Isuzu 5-81215- 022-0/ Mazda 1456- 24-532/ Subaru 49574- 7101	
<b>Uhlíky: alternátory a štartéry pre motocykle</b>							
24.	<b>SM 01</b>	4x6x10			<b>4,34</b>	Držiak uhlíku do alternátora: JAWA	
25.	<b>SM 02</b>	4,9x9,9x16			<b>7,72</b>	<b>Do štartéra:</b> KAWASAKI	
26.	<b>SM 03</b>	5,9x12,6x13, 8			<b>7,97</b> Sada	<b>Do štartéra:</b> HONDA, KAWASAKI Z400/Z500/Z65 0/Z750/Z900/Z1 000/GPZ1100/Z 1100/Z1300	
27.	<b>SM 07</b>	4x6x10			<b>2,05</b> Sada	<b>Do štartéra:</b> JAWA 350	
28.	<b>SM 11</b>	5,8x9x12			<b>5,77</b> Sada	<b>Do štartéra:</b> SUZUKI, YAMAHA, XJ900S, ZX750P, GS500E, TL1000R, IS650P,	
29.	<b>SM 13</b>	5,9x8,9x12			<b>6,17</b> Sada	<b>Do štartéra:</b> SUZUKI, YAMAHA	
30.	<b>SM 14</b>	6x7,5x15			<b>5,77</b> Sada	<b>Do štartéra:</b> NSR, HONDA	















31.	<b>SM 15</b>	6x11x12	7,16 Sada	<b>Do štartéra:</b> HONDA CB250NDC/400NC 82R	
32.	<b>SM 16</b>	5,8x8,9x17	6,05 Sada	<b>Do štartéra:</b> SUZUKI DR 650	
33.	<b>SM 17</b>	4,4x9,5x12	5,70 Sada	<b>Do štartéra:</b> HONDA	
34.	<b>SM 19</b>	4,5x7,1x7	5,52 Sada	<b>Do štartéra:</b>	
35.	<b>SM 20</b>	4x8x8	4,53 Sada	<b>Do štartéra:</b> Skuter: Suzuki Burgman 400	
36.	<b>SM 21</b>	5x9x10	4,68 Sada	<b>Do štartéra:</b> Quad Arctic Cat	















**Uhlíky do motorkov 6/12/24 V**















37.	<b>K 001 B</b>	6x6,75x18	2,95	Motorek kúrenia	
38.	<b>K 001 G</b>	6x6,75x18	2,95	Motorek kúrenia	
39.	<b>K 002 B</b>	6x8x18	2,95	Motorek kúrenia	
40.	<b>K 002 G</b>	6x8x18	2,95	Motorek kúrenia	
41.	<b>K 003 B</b>	6x9x18	3,15	Motorek kúrenia	
42.	<b>K 003 G</b>	6x9x18	3,15	Motorek kúrenia	
	<b>K 004 B</b>	8x8x18	3,10	Motorek kúrenia	
43.	<b>K 004 G</b>	8x8x18	3,10	Motorek kúrenia	















44.	<b>K 005 B</b>	8x10x18		<b>3,30</b>	Motorek kúrenia	
45.	<b>K 005 G</b>	8x10x18		<b>3,30</b>	Motorek kúrenia	
46.	<b>K 006 B</b>	10x10x18		<b>3,55</b>	Motorek kúrenia	
47.	<b>K 006 G</b>	10x10x18	<b>3029-029RS</b>	<b>3,50</b>	Motorek kúrenia	
48.	<b>K 007 B</b>	4x4x8,5		<b>2,45</b>	Motorek kúrenia	
49.	<b>K 007 G</b>	4x4x8,5		<b>2,70</b>	Motorek kúrenia	
50.	<b>K 008 B</b>	8x9x13		<b>3,26</b>	Motorek kúrenia	
51.	<b>K 008 G</b>	8x9x13		<b>3,25</b>	Motorek kúrenia	
52.	<b>K 009 B</b>	5x6,2x10		<b>2,66</b>	Motorek kúrenia	
53.	<b>K 009 G</b>	5x6,2x10		<b>2,66</b>	Motorek kúrenia	
54.	<b>K 010 B</b>	8x9x18		<b>3,38</b>	Motorek kúrenia	
55.	<b>K 010 G</b>	8x9x18	<b>3029-025RS</b>	<b>3,98</b>	Motorek kúrenia	
56.	<b>K 011 B</b>	5,4x8,5x18		<b>3,97</b>	Lodný motor	
57.	<b>K 012 G</b>	6x6x20		<b>4,16</b>	Motorek čerpadla: Sirocco Berliet, Ikarus, Jelcz, Autosan,	












58.	<b>K 013 B</b>	6x6x12		<b>2,87</b>	Motorek kúrenia: Star, Autosan, Lublin, Jelcz / Berliet, Žuk, Lublin, Pn Truck,	
59.	<b>K 013 G</b>	6x6x12		<b>2,87</b>	Motorek kúrenia	
60.	<b>K 014 B</b>	4,1x7,1x6		<b>2,55</b>	Do štartéra motocykla	
61.	<b>K 015 B</b>	6,5x6,5x13	<b>SW 68 MTX 6Y</b>	<b>3,00</b>	Motorek stieračov: Star, Autosan, Jelcz / Berliet, Ursus, Ferguson, F126p, F125p, PN, Lublin Motorek kúrenia: F126p	
62.	<b>K 016 G</b>	4x6,3x11	<b>3029- 018RS</b>	<b>3,10</b>	Motorek kúrenia a vetrania Eberschprecher, Iveco	
63.	<b>K 017 B</b>	3,5x4,8x10		<b>2,48</b>	Motorek vetrania Ikarus	
64.	<b>K 018 G</b>	9,4x9,4x20	<b>3059- 028RS</b>	<b>3,77</b>	Motorek vetrania: autobusy	
65.	<b>K 019 B</b>	4,9x4,9x13		<b>3,00</b>	Motorek kúrenia: Eberschprecher	
66.	<b>K 020 B</b>	3,7x5,7x12		<b>3,15</b>	Motorek kúrenia: Eberschprecher	
67.	<b>K 021 B</b>	3,8x5,7x20		<b>3,50</b>	Motorek kúrenia: Bosch	
68.	<b>K 022 B</b>	4,8x9,8x20		<b>3,33</b>	Motorek ventilátora: Rover 75	
69.	<b>K 023 B</b>	3,9x5x10		<b>3,33</b>	Motorek kúrenia Webasto Air TOP 2000	
70.	<b>K 024 B</b>	4x6x15		<b>3,50</b>	Motorek kúrenia: Webasto	















71.	<b>K 024 G</b>	4x6x15		<b>3,38</b>	Motoriky klimatizáciei	
72.	<b>K 025 G</b>	9x9x15	<b>3029-027RS</b>	<b>3,50</b>	Motorek vetrania	
73.	<b>K 026 G</b>	8x20x32	<b>3029-026RS</b>	<b>6,30</b>	Motorek klimatizáciei: Scania	
74.	<b>K 027 G</b>	6,2x7,9x22		<b>3,88</b>	Motorek vetrania: Jelcz, Solaris, Mann,	
75.	<b>K 028 G</b>	8x9x22		<b>4,37</b>	Motorek vetrania: Mercedes	
76.	<b>K 029 G</b>	6x7,4x15	<b>3029-022RS</b>	<b>3,54</b>	Motorek vertania	
77.	<b>K 030 B</b>	5x5x6,5		<b>2,82</b>	Motorek stieračov: Star, Autosan, Jelcz / Berliet, Ursus, Fegruson, F126p, F125p, Polonez, Żuk, Lublin,	
78.	<b>K 031 G</b>	6,2x9,6x19		<b>3,80</b>	Motorek vetrania Ford,	
79.	<b>K 032 B</b>	7x7x10,5		<b>3,05</b>	Motorek stieračov: Star, Autosan	
80.	<b>K 033 B</b>	7,9x8,8x15		<b>3,65</b>	Motorek vetrania DAEWOO Lanos,	
81.	<b>K 034 G</b>	8x8x20		<b>4,05</b>	Motorek vetrania Audi, BMW,	
82.	<b>K 035 B</b>	8,2x9,2x20		<b>3,77</b>	Motorek vetrania: autobusy,	
83.	<b>K 036 B</b>	6,3x9,6x13		<b>3,22</b>	Lodný motor Motorek klimatizácie	
84.	<b>K 037 B</b>	4x5x10		<b>3,05</b>	Motorek kúrenia	

85.	<b>K 037 G</b>	4x5x10		<b>2,87</b>	Motorek kúrenia	
86.	<b>K 038 B</b>	4x6x10		<b>2,66</b>	Motorek kúrenia	
87.	<b>K 039 B</b>	4,9x10x23	<b>3029-019RS</b>	<b>4,04</b>	Motorek kúrenia pre autobusy	
88.	<b>K 040 G</b>	5x5x18	<b>3029-020RS</b>	<b>2,76</b>	Motorek kúrenia	
89.	<b>K 041 G</b>	3,5x4,5x18		<b>2,87</b>	Motorek kúrenia	
90.	<b>K 042 G</b>	3,8x5,9x13		<b>3,26</b>	Motorek kúrenia Eberschprecher D 2 (24V) Motorek čerpadla PBO.400DAF, Solaris, Ikarus, Autosan, Scania, Volvo, Mercedes, Neoplan, Man,	
91.	<b>K 043 G</b>	6x6x20	<b>3029-021RS</b>	<b>3,80</b>	Motorek kúrenia X7, Tatra,	
92.	<b>K 044 B</b>	8x10x18		<b>3,50</b>	Motorek kúrenia X7, Tatra,	
93.	<b>K 045 B</b>	4,5x4,5x12		<b>2,59</b>	Motorek stieračov k FSO	
94.	<b>K 046 B</b>	3x7x9	<b>3029-016RS</b>	<b>2,48</b>	Motorek stieračov	
95.	<b>K 047 G</b>	3,5x4,4x13,5		<b>3,10</b>	Motorek kúrenia Webasto HL-18	
96.	<b>K 048 G</b>	7x12,5x25		<b>4,32</b>	Motorek čerpadla vspomalenia	
97.	<b>K 049 G</b>	3,9x6,2x14		<b>3,26</b>	Motorek kúrenia	
98.	<b>K 050 B</b>	3,9x6,2x14		<b>2,87</b>	Motorek stieračov	


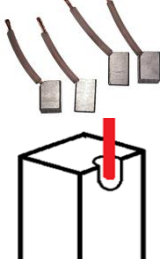
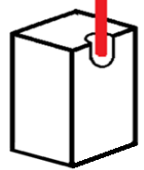
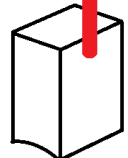
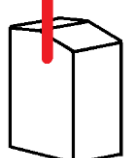
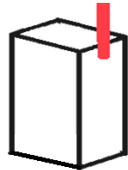
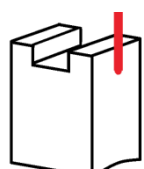
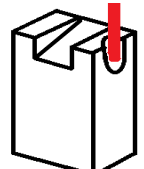
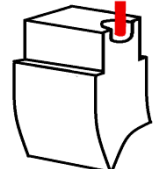
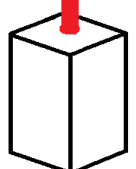
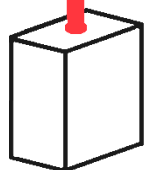
99.	<b>K 051 B</b>	4x4x18			<b>2,51</b>	Motorek stieračov	
100.	<b>K 052 B</b>	4x4x9			<b>2,82</b>	Motorek stieračov	
101.	<b>K 053 B</b>	4x4x10		<b>3029-017RS</b>	<b>2,66</b>	Motorek stieračov	
102.	<b>K 054 B</b>	4,5x6,5x14			<b>3,05</b>	Motorek stieračov Cinquecento	
103.	<b>K 055 B</b>	5x5x10			<b>2,70</b>	Motorek vetrania, motorek vodného čerpadla BMW	
104.	<b>K 056 G</b>	8x8x30		<b>3029-024RS</b>	<b>4,00</b>	Motorek stieračov	
105.	<b>K 057 B</b>	5x6,2x15		<b>HX 56 0.1786.1 3029-015RS</b>	<b>3,26</b>	Motorek kúrenia: CPK Elektrolux: Volvo KS3442/21/140	
106.	<b>K 058 G</b>	7,2x7,2x20			<b>3,50</b>	Motorek kúrenia	
107.	<b>K 059 B</b>	4x5x10			<b>3,25</b>	Motorek otvárania okien, Motorek kúrenia	
108.	<b>K 060 B</b>	7x8x18			<b>3,33</b>	Motorek kúrenia	
109.	<b>K 060 G</b>	7x8x18		<b>OB9023 3029-023RS</b>	<b>3,10</b>	Motorek kúrenia	
110.	<b>K 061 B</b>	8x10x19,5	31343203 41	<b>HX 341 140164 0.1792.1</b>	<b>3,74</b>	Motorek klimatizácie Webasto - Mercedes, MAN	
111.	<b>K 061 G</b>	8x10x19,5			<b>3,42</b>	Motorek kúrenia	
112.	<b>K 062 G</b>	6x6x11,6			<b>3,38</b>	Motorek kúrenia	

113.	<b>K 063 G</b>	6x9x16,5		<b>HX 26</b> <b>0.1796.1</b> <b>H26</b> <b>0.1796.1</b>	<b>4,10</b>	Motorek kúrenia; Webasto,	
114.	<b>K 064 B</b>	5x6,3x10		<b>HX 54</b>	<b>3,22</b>	Motorek kúrenia BOI-WO, Heat-on EP523BOS	
115.	<b>K 064 G</b>	5x6,3x10			<b>2,70</b>	Motorek kúrenia	
116.	<b>K 065 G</b>	8x12x20	00-14-16-31	<b>HX 106</b> <b>0.1798.1</b> <b>3029-</b> <b>005RS</b>	<b>5,15</b>	Motorek kúrenia AVOG	
117.	<b>K 066 G</b>	8x8x21		<b>PL 5</b>	<b>4,55</b>	Motorek kúrenia	
118.	<b>K 067 G</b>	6,95x12,25x21,15		<b>HPIX 1</b> <b>141083</b>	<b>4,37</b>	Elektrické spomalenie riadenie: Renault, Peugeot, Citroen,	
119.	<b>K 068 B</b>	5x5x16			<b>2,40</b>	Motorek kúrenia	
120.	<b>K 069 B</b>	5,3x7,1x15			<b>2,82</b>	Motorek kúrenia	
121.	<b>K 070 B</b>	4,4x4,4x9,5			<b>2,87</b>	Motorek otvárania okien	
122.	<b>K 071 G</b>	8x8x28			<b>2,58</b>	Motorek kúrenia Toyota Carina	
123.	<b>K 072 B</b>	7x7x18			<b>3,15</b>	Motorek kúrenia	
124.	<b>K 073 B</b>	4,5x6,5x17			<b>3,42</b>	Motorek kúrenia	
125.	<b>K 074 B</b>	6x6x25			<b>3,65</b>	Motorek lodný	
126.	<b>K 075 B</b>	6,5x8x13			<b>3,05</b>	Motorek stieračov: Star, Autosan, Jelcz / Berliet, F125p, PN,	

127.	<b>K 076 G</b>	7,9x7,9x21				4,65	Motorek kúrenia	
128.	<b>K 077 B</b>	4,7x9,7x18				3,22	Motorek kúrenia	
129.	<b>K 078 G</b>	6,3x8x18				3,60	Motorek kúrenia CPA, CPB, CPL,	
130.	<b>K 079 B</b>	8x10x20				4,70	Motorek kúrenia: VW Sharan TDI 1,9 ST	
131.	<b>K 080 B</b>	8x10x20				5,25	Motorek kúrenia: VW Sharan TDI 1,9 NT	
132.	<b>K 081 G</b>	5,95x12,4x2 0	14111041 1037	<b>HPIX 3 018021</b>		4,10	Elektrické spomalovanie riadenia Renault, Peugeot, Citroen,	
133.	<b>K 082 B</b>	8x8x14				3,70	Motorek kúrenia	
134.	<b>K 082 G</b>	8x8x14	31370141 23 31370141 63 31343200 35 31343200 61 31370141 09 31370141 00 31343200 25 31343200 26 31370142 02	<b>HX124 0.1791.1 HX124 3029- 008RS</b>		3,77	Motorek kúrenia: DPC, EPA12,	
135.	<b>K 083 G</b>	6,3x6,3x11	31370141 00 31343200 25 31343200 26 31370142 02	<b>HX116 0.1790.1 3029- 007RS</b>		3,15	Motorek kúrenia Bosch	
136.	<b>K 084 B</b>	8x8x15	31343201 01 31343201 72	<b>HX172 0.1789.1 3029- 011RS</b>		3,11	Motorek kúrenia Bosch	
137.	<b>K 085 G</b>	8x6,3x14	31370141 11	<b>HX 346 0.1787.1 3029- 014RS</b>		3,15	Motorek kúrenia Bosch DPG12, DRP, DRH12	

138.	<b>K 086 G</b>	6x6x11,5	92330 90177	<b>HX 16 H16 0.1794.1 3029- 001RS</b>	<b>2,99</b>	Motorek kúrenia Ducellier	
139.	<b>K 087 B</b>	6,2x10x13,5			<b>3,93</b>	Štartér z motorovej lode	
140.	<b>K 088 B</b>	6,8x10,1x18			<b>3,24</b>	Motorek kúrenia	
141.	<b>K 089 G</b>	6,9x8x18			<b>3,50</b>	Motorek kúrenia:	
142.	<b>K 090 G</b>	8x6,3x11	31370141 71 31343201 55	<b>HX 155 0.1788.1 3029- 009RS</b>	<b>3,38</b>	Motorek kúrenia Bosch	
143.	<b>K 091G</b>	5x6,4x15	30HL1A 1599- 1721- 0602	<b>HX 109 0.1797.1 3029- 006RS</b>	<b>3,82</b>	Motorek kúrenia Webasto	
144.	<b>K 092 B</b>	7,1x7,1x14,3		<b>HX 3 0.1795.1 3029- 012RS HX161</b>	<b>3,77</b>	Motorek kúrenia; Leece / Neville	
145.	<b>K 093 G</b>	5x6,3x12,5	31370141 62	<b>0.1799.1 3029- 010RS</b>	<b>3,27</b>	Motorek kúrenia Bosch	
146.	<b>K 094 G</b>	8x10x19			<b>4,60</b>	Motor čerpadla CO, nahrievanie: Star, San, Sanok, Autosan	
147.	<b>K 095 G</b>	8x9x20			<b>4,05</b>	Motorek ventilátora	
148.	<b>K 096 B</b>	4x6x10			<b>2,67</b>	Motorek kúrenia: Webasto	
149.	<b>K 097 B</b>	4,9x8,1x12			<b>3,77</b>	Motorek vetrania 24V	
150.	<b>K 098 B</b>	7,1x7,1x14		<b>MTX 7</b>	<b>3,15</b>	Motorek klimatizáciei	
151.	<b>K 099 B</b>	8x8x22			<b>4,44</b>	Motorek klimatizácie	

152.	<b>K 100 G</b>	8x10x22			<b>4,88</b>	Motorek klimatizácie: VOLVO, SCANIA, DAF	
153.	<b>K 101 G</b>	7,9x8,7x18			<b>4,05</b>	Motorek klimatizácie: Peugeot 206, 306, 307	
154.	<b>K 102 B</b>	6x6x10			<b>2,83</b>	Motorek kúreni: Star, Autosan, Jelcz / Berliet, Żuk, Lublin, PN Truck	
155.	<b>K 103 G</b>	7,3x7,3x13,5			<b>2,88</b>	Motorek kúrenia: CQN	
156.	<b>K 104 G</b>	4x4x20			<b>3,77</b>	Spojka elektromagnetic kého čerpadla vody: F125p, Polonez, Lublin, PN Truck, Uwagi: elektrografit	
157.	<b>K 105 B</b>	8x10x19,50		140164	<b>3,77</b>	Motorek kúrenia: Webasto: elektrografit	
158.	<b>K 106 G</b>	3,8x5,8x11			<b>1,36</b>	Motorek kúrenia:	
159.	<b>K 107 G</b>	3,8x5,8x9			<b>1,17</b>	Motorek kúrenia:	
160.	<b>K 108</b>	3x5x12,8			<b>2,32</b>	Motorek:	
161.	<b>K 109 B</b>	6x11x27			<b>4,65</b>	Motorek čerpadla spomalenia Mini Cooper	
162.	<b>K 110 B</b>	5,5x12,3x22	HPI 4 HPIX 4		<b>4,65</b>	Motorek: Siemens VDO, Mercedes A-class	
163.	<b>K 111 B</b>	7,9x7,9x17	88561116 5	AX-004 A-004	<b>4,65</b>	Motorek: systém kontroly podvozka : 442 020 xxx1 i inne	
164.	<b>K 300 B</b>	4,5x8,4x23,2 4,5x12,4x23, 2	3 134 320 607 3 134 320 611 3 134 320 320	AX-008 A-008	<b>8,42</b>	Motorek ventilátora GPG 3 137 230 005 i inne	
165.	<b>K 301 B</b>	7x9,9x20	3 134 320 636	AX-011 A-011	<b>8,37</b>	Motorek ventilátora GPG, Audi	

166.	<b>K 302 B</b>	8x8x15,2	3 134 320 617	AX-010	<b>14,97</b>	Motorek ventilátora GBM, BMW, PSA	
			3 134 320 618	A-010	<b>Sada</b>		
167.	<b>K 303 B</b>	8x10x15,20	3 134 320 608	AX-009	<b>15,00</b>	Motorek ventilátora GBM, BMW, PSA	
			3 134 320 615	A-009	<b>Sada</b>		
168.	<b>B 49 81 12</b>	4,9x8,1x12			<b>2,26</b>		
169.	<b>B 50 65 12</b>	5x6,5x12			<b>1,33</b>		
170.	<b>B 50 80 19</b>	5x8x19			<b>1,54</b>		
171.	<b>B 68x101 x18S</b>	6,8x10,1x18			<b>2,25</b>		
172.	<b>B 80 98 19</b>	8x9,8x19			<b>2,25</b>		
173.	<b>B 80 100 19</b>	8x10x19,5			<b>2,23</b>		
174.	<b>B 82 100 23</b>	8,5,x10x23			<b>5,23</b>		
175.	<b>G 0 40 08</b>	4x4x8,5			<b>1,23</b>		
176.	<b>G 50 60 18</b>	5x6x18			<b>1,62</b>		

177.	<b>G 50 80 19</b>	5x8x19	2,15
178.	<b>G 50 80 20</b>	5x8x20	2,50
179.	<b>G 60 60 20</b>	6x6x20	1,62
180.	<b>G 60 70 18</b>	6x7x18	1,45
181.	<b>G 62 96 19</b>	6,2x9,6x19	1,68
182.	<b>G 65 120 22</b>	6,5x12x22	2,03
183.	<b>G 70 80 20</b>	7x8x20	1,74
184.	<b>G 80 80 21</b>	8x8x21	2,03
185.	<b>G 80 80 30</b>	8x8x30	2,67
186.	<b>G 80 100 19S</b>	8x10x19	2,50
187.	<b>G 90 90 18</b>	9x9x18	1,97

